Left Expansion Area

You can select from the following options.

FZ-VBR401	FZ-VDM401	FZ-VDM402	FZ-VBD401	FZ-V2S400	FZ-V2S401	FZ-VSC402
Barcode	DVD MULTI Drive	DVD-ROM Drive	Blu-ray Disc Drive	SSD Pack (512	SSD Pack (1	Smart Card
Reader	Pack	Pack	Pack	GB)	TB)	Reader

Inserting an option to the left expansion area

1. Turn off the computer and disconnect the AC adaptor.

IMPORTANT

- We recommend that you turn off the computer completely the following.
 - 1. Click (Start) [Settings] [System] [Recovery].
 - 2. Click [Restart now] in "Advanced startup".
 - 3. Click [Restart now] on the "We'll restart your device so save your work" screen.
 - 4. Click [Turn off your PC].
- Remove the battery pack. (Replacing the Battery Pack)
 When using second battery pack>
 - Remove the second battery pack. (
 Replacing the Battery Pack)
- 3. While sliding the latch (A) to the arrow direction, open the cover (B).



- 4. Insert an option to the left expansion area.
 - If an option has not been inserted, proceed to step 3.
 - Remove the screw (C) and slide the latch (D) until the orange-colored sign appears in the indicator (E). Use the PH 1 (PH #1) screwdriver.



2. Pull the tab (F) to pull out an option.



<Only for model with DVD MULTI Drive Pack, DVD-ROM Drive Pack or Blu-ray Disc Drive Pack> Press the release handle (G) and pull the release handle (G) to pull out an option.



3. Insert an option until it securely fits the connector.



4. <When using DVD MULTI Drive Pack, DVD-ROM Drive Pack or Blu-ray Disc Drive Pack> Press the release handle (H) to set in.



5. Slide the latch (I) until the orange-colored sign disappears in the indicator (J) and tighten the screw (K) firmly. Use the PH 1 (PH #1) screwdriver.

Use 1 screw.



Recommended tightening torque

 $0.45 \text{ N} \cdot \text{m} \pm 0.05 \text{ N} \cdot \text{m} (4.5 \text{ kgf} \cdot \text{cm} \pm 0.5 \text{ kgf} \cdot \text{cm})$

- 5. Close the cover until it clicks.
- 6. Insert the battery pack.