

Left Expansion Area

You can select from the following options.


FZ-VBR401 / FZ-VBR402	FZ-VDM401	FZ-VDM402	FZ-VBD401	FZ-V2S40	FZ-V2F40	FZ-VSC402
Barcode Reader <Only for North America> (→ Barcode Reader)	DVD MULTI Drive Pack (→ Optical Disc Drive)	DVD-ROM Drive Pack (→ Optical Disc Drive)	Blu-ray Disc Drive Pack (→ Optical Disc Drive)	SSD Pack (→ SSD Pack)	SSD Pack <Only for North America> (→ SSD Pack)	Smart Card Reader (→ Smart Card)

Inserting an option to the left expansion area

1. Turn off the computer and disconnect the AC adaptor.

IMPORTANT

- We recommend that you turn off the computer completely the following.


1. Click  (Start) - [Settings] - [System] - [Recovery].
2. Click [Restart now] in "Advanced startup".
3. Click [Restart now] on the "We'll restart your device so save your work" screen.
4. Click [Turn off your PC].

2. Remove the battery pack. (→ Replacing the Battery Pack)

<When using second battery pack>

- Remove the second battery pack. (→ Replacing the Battery Pack)


3. While sliding the latch (A) to the arrow direction, open the cover (B).

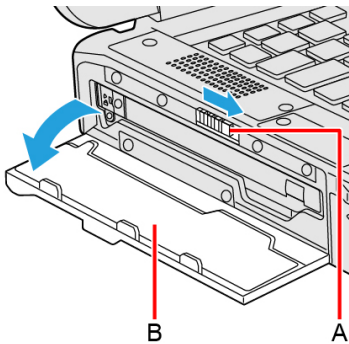


4. Insert an option to the left expansion area.

- If an option has not been inserted, proceed to step 3.

1. Remove the screw (C) and slide the latch (D) until the orange-colored sign appears in the indicator (E).
Use the PH 1 (PH #1) screwdriver.

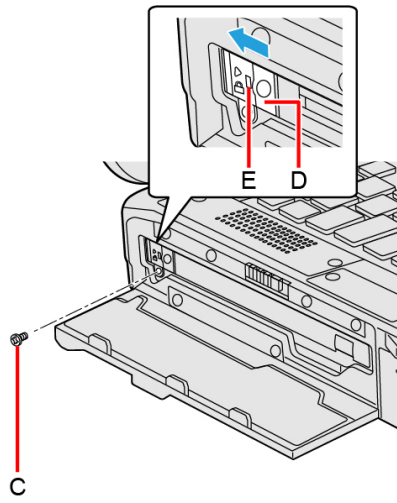


2. Pull the tab (F) to pull out an option.

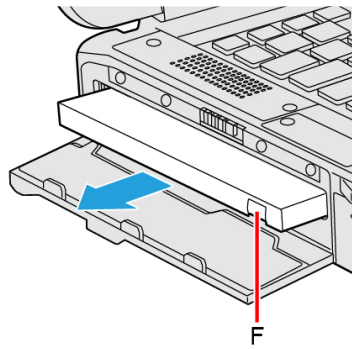


<Only for model with optical disc drive>

Press the release handle (G) and pull the release handle (G) to pull out an option.

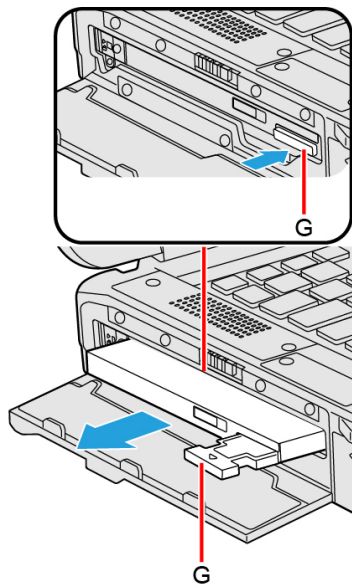


3. Insert an option until it securely fits the connector.

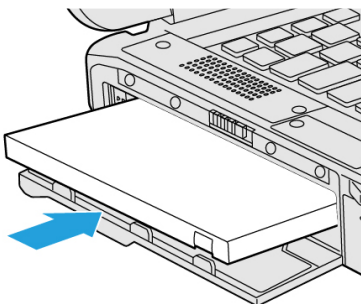


4. <When using optical disc drive>

Press the release handle (H) to set in.

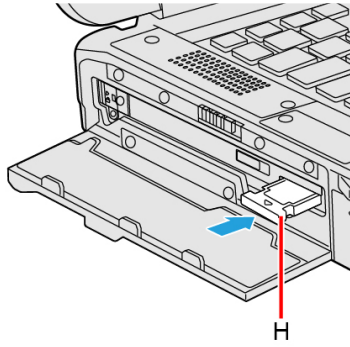

- Slide the latch (I) until the orange-colored sign disappears in the indicator (J) and tighten the screw (K) firmly.
Use the PH 1 (PH #1) screwdriver.
Use 1 screw.

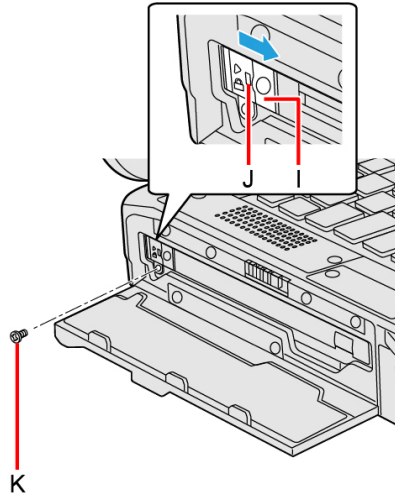

Recommended tightening torque

0.45 N•m \pm 0.05 N•m (4.5 kgf•cm \pm 0.5 kgf•cm)

- Close the cover until it clicks.**
- Insert the battery pack.**