

Palm Rest Expansion Area

You can select from the following options.


FZ-VNF401	FZ-VFP401	FZ-VFP402	FZ-VNF402
Contactless Smart Card Reader	Fingerprint Reader (Windows Hello)	Fingerprint Reader (Windows Hello, Multi User authentication)	Contactless Smart Card Reader <Only for North America>

Inserting an option to the palm rest expansion area

1. Turn off the computer and disconnect the AC adaptor.


IMPORTANT

- We recommend that you turn off the computer completely the following.

1. Click  (Start) - [Settings] - [System] - [Recovery].
2. Click [Restart now] in "Advanced startup".
3. Click [Restart now] on the "We'll restart your device so save your work" screen.
4. Click [Turn off your PC].

2. Remove the battery pack. ( [Replacing the Battery Pack](#))

<When using second battery pack>


- Remove the second battery pack. ( [Replacing the Battery Pack](#))

3. Insert an option to the palm rest expansion area.


- The dummy cover may have been inserted.

1. Remove the screws (A).

Use the PH 1 (PH #1) screwdriver.

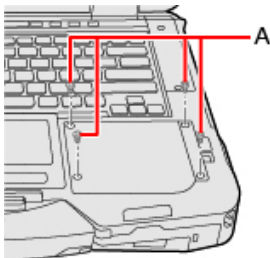


2. Remove an option.

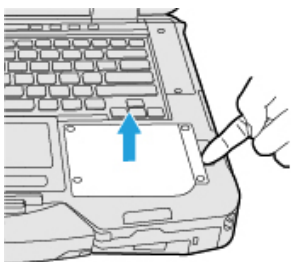

3. Insert an option until it securely fits the connector.



4. Tighten the screws (B) firmly.
Use the PH 1 (PH #1) screwdriver.
Use 4 screws.

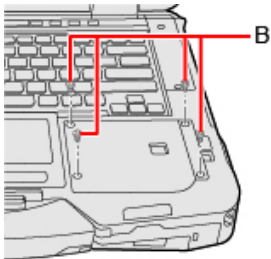

Recommended tightening torque

$0.45 \text{ N}\cdot\text{m} \pm 0.05 \text{ N}\cdot\text{m}$ ($4.5 \text{ kgf}\cdot\text{cm} \pm 0.5 \text{ kgf}\cdot\text{cm}$)

4. Insert the battery pack.