

Rear Expansion Area

You can select from the following options.


FZ-VCN401	FZ-VCN402	FZ-VCN403	FZ-VCN405	FZ-VCN406
VGA Port / Serial Port / 2nd LAN Port (→ External Display / Serial Port / LAN)	Serial Port / USB 3.2 Gen 1 (Type-A) Port / HDMI Port (→ Serial Port / USB Devices / External Display)	USB 3.2 Gen 1 (Type-A) Port / USB 3.2 Gen 1 (Type-A) Port / HDMI Port (→ USB Devices / External Display)	Serial Port / Serial Port / 2nd LAN Port (→ Serial Port / LAN)	USB 3.2 Gen 1 (Type-A) Port / USB 3.2 Gen 1 (Type-C) Port / HDMI Port (→ USB Devices / External Display)

Inserting an option to the rear expansion area

1. Turn off the computer and disconnect the AC adaptor.

IMPORTANT

- We recommend that you turn off the computer completely the following.


1. Click  (Start) - [Settings] - [System] - [Recovery].
2. Click [Restart now] in “Advanced startup”.
3. Click [Restart now] on the “We’ll restart your device so save your work” screen.
4. Click [Turn off your PC].

2. Remove the battery pack. (→ Replacing the Battery Pack)

<When using second battery pack>

- Remove the second battery pack. (→ Replacing the Battery Pack)


3. Slide the latch (A) to the arrow direction.
4. Open the cover (B).

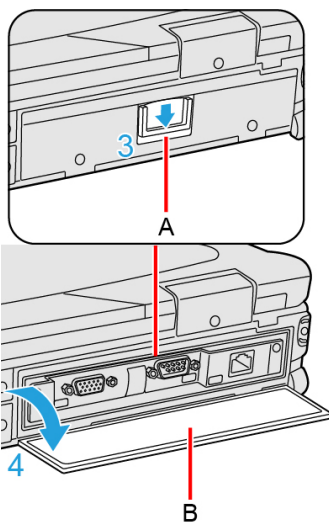


5. Insert an option to the rear expansion area.

- If an option has not been inserted, proceed to step 2.


1. Remove the screws (C) and pull the tab (D) to pull out an option.
Use the PH 1 (PH #1) screwdriver.

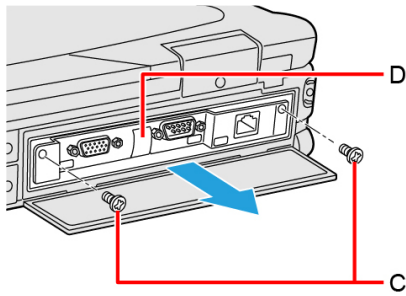

2. Insert an option until it securely fits the connector.

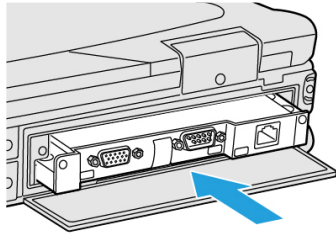

3. Tighten the screws (E) firmly.
Use the PH 1 (PH #1) screwdriver.
Use 2 screws.

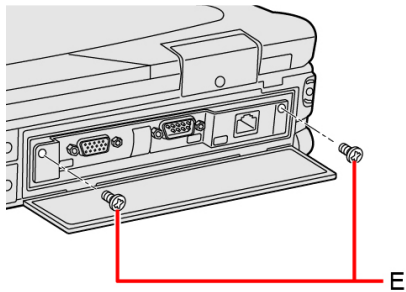

Recommended tightening torque

0.45 N·m ± 0.05 N·m (4.5 kgf·cm ± 0.5 kgf·cm)

6. Close the cover until it clicks.
7. Insert the battery pack.