

Front Expansion Area

You can select from the following options.


FZ-VZSU1HU	FZ-VSC551	FZ-VFP551	FZ-VNF551
Second Battery Pack	Smart Card Reader	Fingerprint Reader	Contactless Smart Card Reader

Inserting an option to the front expansion area

1. Turn off the computer and disconnect the AC adaptor.

IMPORTANT

- To insert a fingerprint reader, turn off the computer completely the following.
- Similarly for other options, we recommend that you turn off the computer completely the following.

1. Click  (Start) -  (Settings) - [Update & Security] - [Recovery].
2. Click [Restart now] under "Advanced startup".
3. Click [Turn off your PC].

2. Turn your computer over and remove the battery pack. ( [Replacing the Battery Pack](#))


<When using second battery pack>

- Remove the second battery pack. ( [Replacing the Battery Pack](#))


Make sure no foreign objects are under the computer.

3. Insert an option to the front expansion area.

1. If the dummy pack is inserted, remove it.
While sliding the latch (A), pull out the dummy pack.

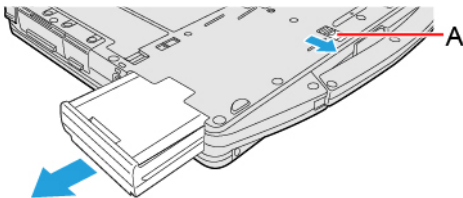


2. Slide an option in parallel with the arrow direction until it click to the secured position.

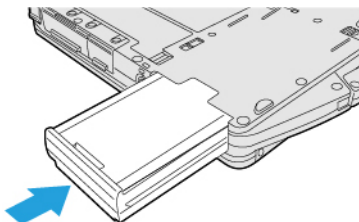

3. <When using fingerprint reader>
Tighten the screw (B) supplied with fingerprint reader.
Use the Torx T8H screwdriver.

Use 1 screw (Black).

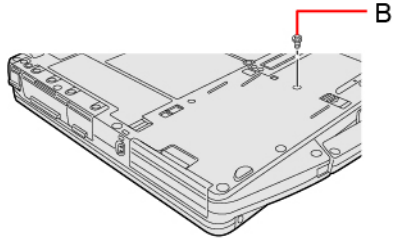

Recommended tightening torque

0.45 N•m \pm 0.05 N•m (4.5 kgf•cm \pm 0.5 kgf•cm)

4. Insert the battery pack carefully.