







TOUGHBOOK Universal Bay

You can select from the following options.


FZ-VDM553	FZ-VBD553	FZ-VSD551	FZ-VSC552	FZ-VDR553	FZ-VBR551 / FZ-VBR552
DVD MULTI Drive Pack ( Optical Disc Drive)	Blu-ray Disc Drive Pack ( Optical Disc Drive)	SSD Pack ( SSD Pack)	Smart Card Reader ( Smart Card)	DVD-ROM Drive Pack ( Optical Disc Drive)	Barcode Reader <Only for North America> ( Barcode Reader)

Inserting an option to the TOUGHBOOK universal bay

1. Turn off the computer and disconnect the AC adaptor.

IMPORTANT

- To insert a SSD pack, turn off the computer completely the following.
- Similarly for other options, we recommend that you turn off the computer completely the following.

1. Click  (Start) - [Settings] - [System] - [Recovery].
2. Click [Restart now] in "Advanced startup".
3. Click [Restart now] on the "We'll restart your device so save your work" screen.
4. Click [Turn off your PC].

2. Turn your computer over and remove the battery pack. ( [Replacing the Battery Pack](#))

<When using second battery pack>


- Remove the second battery pack. ( [Replacing the Battery Pack](#))

Make sure no foreign objects are under the computer.


3. Insert an option to the TOUGHBOOK universal bay.

- The dummy pack may have been inserted.

1. While sliding the latch (A), pull out an option.

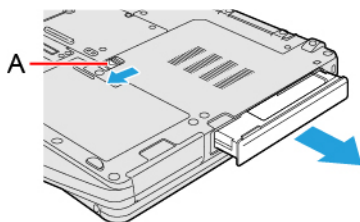

2. Slide an option in parallel with the arrow direction until it clicks to the secured position.

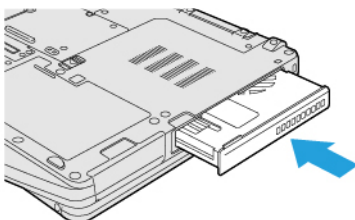

4. Insert the battery pack.