





Palm Rest Expansion Area


You can select from the following options.

FZ-VNF401	FZ-VNF402	FZ-VFP401	FZ-VFP402
Contactless Smart Card Reader ( Contactless Smart Card Reader)	Contactless Smart Card Reader <Only for North America> ( Contactless Smart Card Reader)	Fingerprint Reader (Windows Hello) ( Fingerprint Reader)	Fingerprint Reader (Windows Hello, Multi User authentication) ( Fingerprint Reader)

IMPORTANT

- <Only for model with Fingerprint Reader (Windows Hello, Multi User authentication)>

Before using the fingerprint reader (Windows Hello, Multi User authentication), you need to change following settings.


1. Click  (Start) - [Settings] - [System] - [Recovery].
2. Click [Restart now] in "Advanced startup".
3. Click [Restart now] on the "We'll restart your device so save your work" screen.
4. Click [Troubleshoot] - [Advanced options] - [UEFI Firmware Settings] - [Restart].
The computer restarts, and the Setup Utility screen appears.
5. Select the [Exit] menu, and then double-click [Load Default Values].
If the "Load Optimized Defaults" is displayed, click [Yes].
6. Select the [Security] menu, and then confirm [Enhanced sign-in security] is set to [Disabled].
7. Select the [Exit] menu, and then double-click [Save Values and Reboot].
If the "Save Values and Reboot" is displayed, click [Yes].

Inserting an option to the palm rest expansion area

1. Turn off the computer and disconnect the AC adaptor.


IMPORTANT

- We recommend that you turn off the computer completely the following.

1. Click  (Start) - [Settings] - [System] - [Recovery].
2. Click [Restart now] in "Advanced startup".
3. Click [Restart now] on the "We'll restart your device so save your work" screen.
4. Click [Turn off your PC].

2. Remove the battery pack. ( [Replacing the Battery Pack](#))


<When using second battery pack>

- Remove the second battery pack. ( [Replacing the Battery Pack](#))


3. Insert an option to the palm rest expansion area.

- The dummy cover may have been inserted.


1. Remove the screws (A).
Use the PH 1 (PH #1) screwdriver.

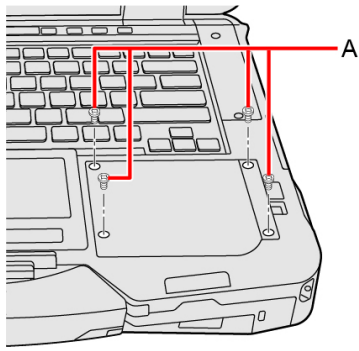


2. Remove an option.

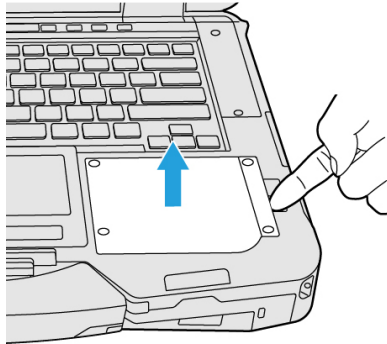

3. Insert an option until it securely fits the connector.

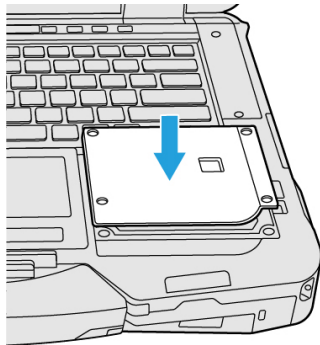

4. Tighten the screws (B) firmly.
Use the PH 1 (PH #1) screwdriver.
Use 4 screws.

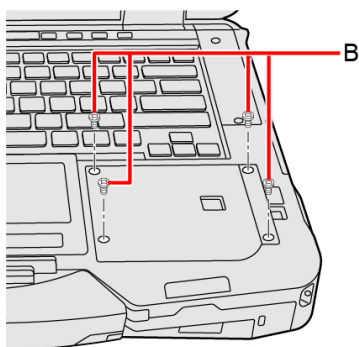

Recommended tightening torque

0.45 N•m ± 0.05 N•m (4.5 kgf•cm ± 0.5 kgf•cm)

4. Insert the battery pack.